

# Enviro Outdoor Board Hanging Guide





Enviro Outdoor Board is a sustainable plastic-free alternative to corflutes. This board is fibre based, recyclable and biodegradable – **created for short term** signage projects, including outdoors of up to 3 months (depending on weather conditions).

The ingredients which make the board water repellent are commonly used in the paper industry which allows the board to be **100% recyclable** with other paper waste, and can be disposed of for recycling in the kerbside **yellow lid bin** in Australia. Enviro Outdoor Board is a natural wood fibre-based product and it will react to surrounding conditions and mounting or hanging of the board should allow room for the board to expand or shrink.

**When hanging boards outside, ALL sides of the board should be attached to a support**, ie. attached to a fence, wall, inserted into a frame. Holes should be punched into the board on all sides at several points (a minimum of 15mm from the edge). For large panels we recommend a binding point at least every 400mm (more if weather conditions are wet or windy). Eyelets are recommended to support the punched holes. Wire, string, screws or cable ties can be used to attach the board, remember to allow some slack in the bind for expansion and contraction. In wet weather it is important to well support the board.

Enviro Outdoor Board can also be hung indoors, using velcro strips for walls or hanging wires from ceilings.

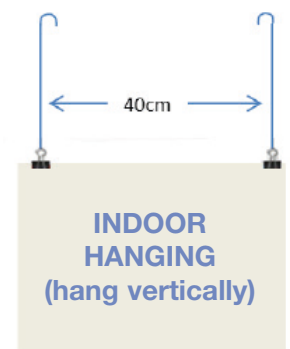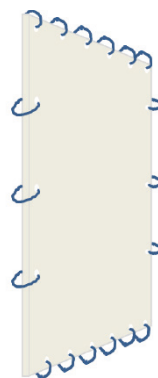

**OUTDOOR FENCE HANGING**  
suggested minimum binding points

**OUTDOOR POST HANGING**  
supported by two signs back-to-back minimum binding points

